

Welcome to the passion people

Quick bleed instruction after shortening the hose

techtip 2, May 2012

Before you begin turn the master 45° upwards as shown.



Attention: Prepare a syringe following this method.



Drill a 2mm hole in the syringe at the scale position "30"



Fill the syringe up to "20" on the scale with MAGURA Royal Blood, then fill with air up to "25" on the scale .





MAGURA




Remove the EBT screw with a Torx T25



Press in the syringe

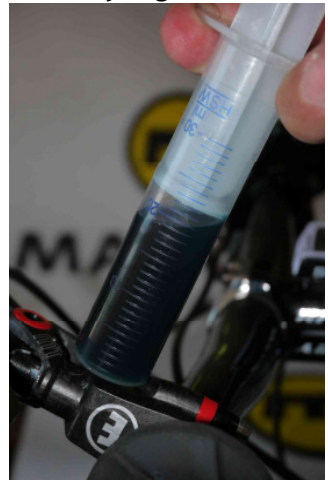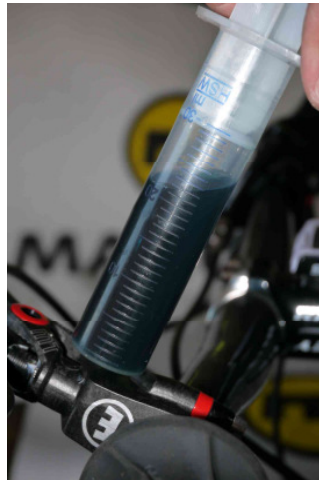

Pull the piston up to “30” on the scale, just below the hole, press in the oil again in the master
Repeat this about 3 - 4 times.

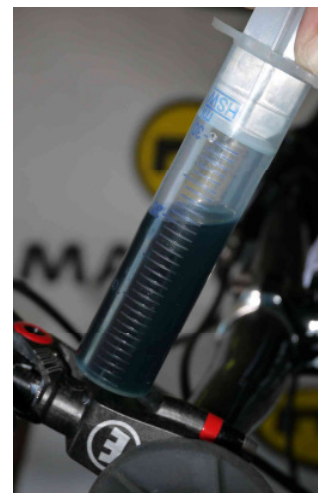

In the last step pull the piston above the hole at “30” on the scale. With this the system will be pressureless,
Press your finger on the hole in the syringe and remove the syringe.



MAGURA



Fill the EBT up to the top and close the system with the EBT plug, screw it until flush, Torque 0.5Nm

Check the brake

After shortening the hose and adjusting hose routing check the brake for leaks and control the function by pulling on the lever blade.



If the result is not satisfactory please follow the instructions for brake bleeding.



MAGURA